

ROUND

Lazy Suzan 3 Trays

Installation Instructions

Content List


- 1 telescopic stainless steel post with pre-installed adjustment ring B
- 2 supporting ring D
- 2 positioning supports: A (top) and E (bottom)
- 3 Shelves
- 3 Supporting cones C
- Mounting hardware

Tools required for mounting

Screwdriver: Philips or square drive

Mounting Steps-Instructions

1. Use templates provided to install top positioning support A and bottom positioning support E.
2. Remove plastic cones C and Support ring D from the stainless steel post.
3. Insert plastic cone through the bottom center of each shelf.
Note: make sure that you line up the wide rib with wide slot. To ensure proper fit, you must push the cone into the center hole until it snaps into the locked position.
4. Slide top shelf, support ring D and bottom shelf onto stainless steel post.
5. Insert stainless steel post into bottom positioning support E.
6. Insert telescoping portion of chrome post into the top positioning support-tighten set screw B to secure the assembly.
7. Make sure the bottom shelf is in its resting position.
8. Fix location of top shelf by tightening set screw on support ring D.
9. Secure stainless steel post inside bottom positioning support E by tightening the set screw.

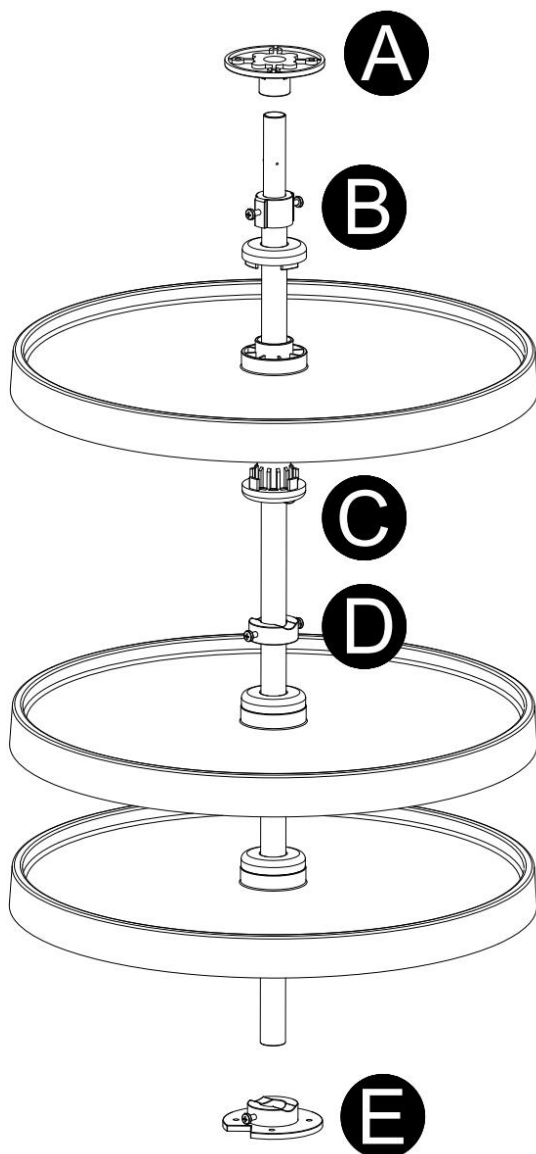


ROUND

Lazy Suzan 3 Trays


Positioning Template

Upper pivot support
mounting hole pattern

Bottom positioner plate
mounting hole pattern

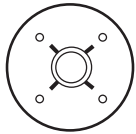

Note: uses 1/8" diameter
drill for pilot holes

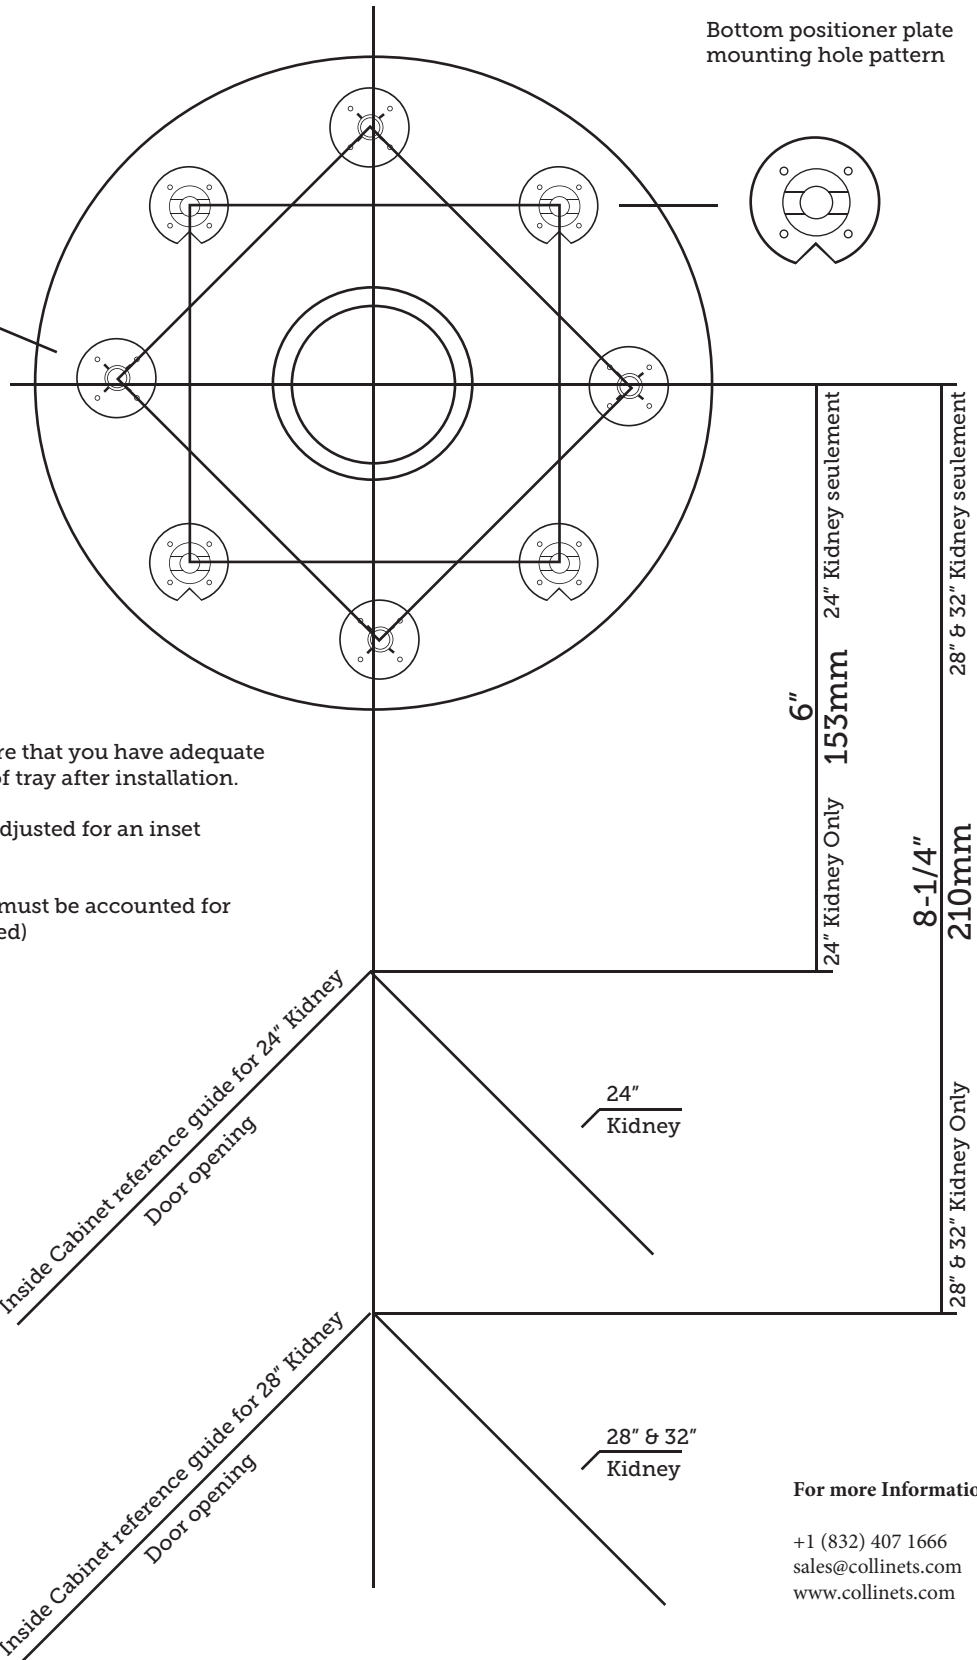

Attention

Prior to drilling holes, ensure that you have adequate clearance for free rotation of tray after installation.

Template position may be adjusted for an inset door application.

Any inside re-inforcement must be accounted for (minimum dimensions noted)

For more Information

+1 (832) 407 1666
sales@collinets.com
www.collinets.com