


INSTALLATION GUIDE

SOFT CLOSE DRAWER SLIDES FOR ALL CABINETS

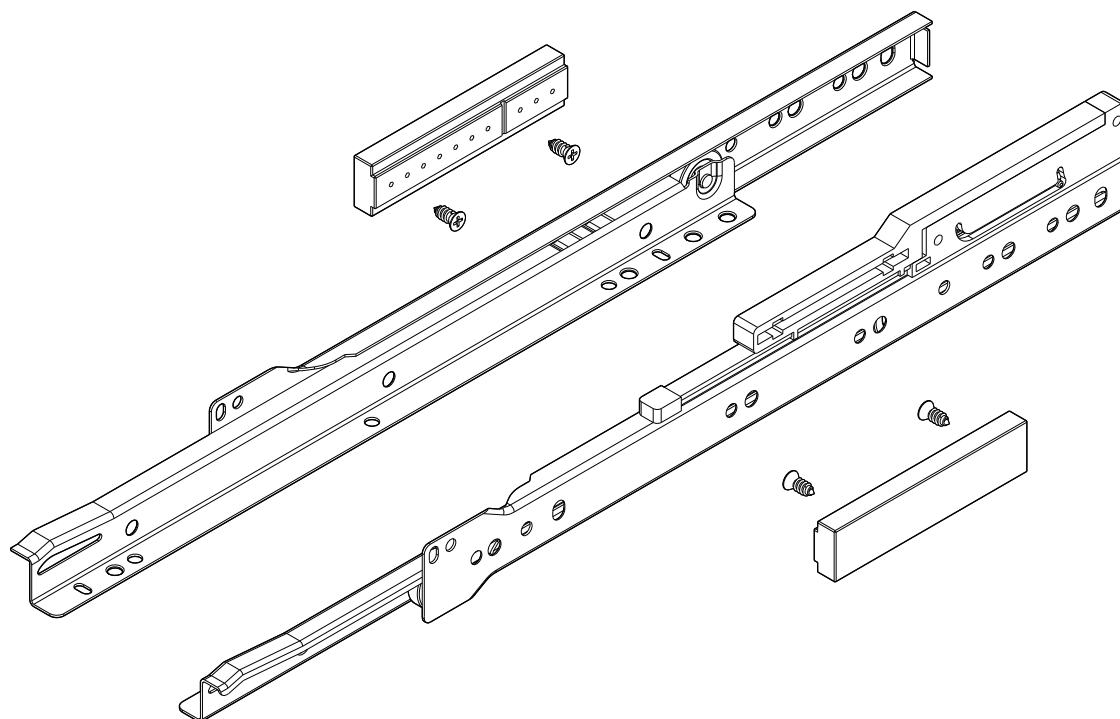

Questions, problems, missing parts?
Before returning to the store, call Collinets Customer Service
8 a.m. - 7 p.m., CST, Monday - Friday
832-407-1666
SALES@COLLINETS.COM | COLLINETS.COM

THANK YOU

We appreciate the trust and confidence you have placed in Collinets by purchasing this product. We strive to create quality products designed to enhance your home continually. Visit us online to see our complete line of products available for your home improvement needs. Thank you


Installation Options

1 WHICH CABINET DO I HAVE?

Please note the following points:


- These slides can be installed in Face Frame and Frameless cabinets.
- Drawer side clearance must be 1/2in. on either side of drawer box. (See Page 5 diagram for more information.)

Face Frame

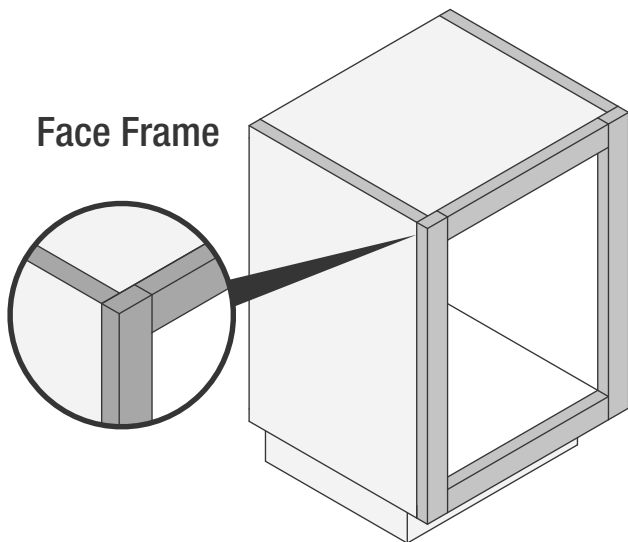


If you have Face Frame cabinets, please follow all Face Frame instructions in this manual.

Frameless

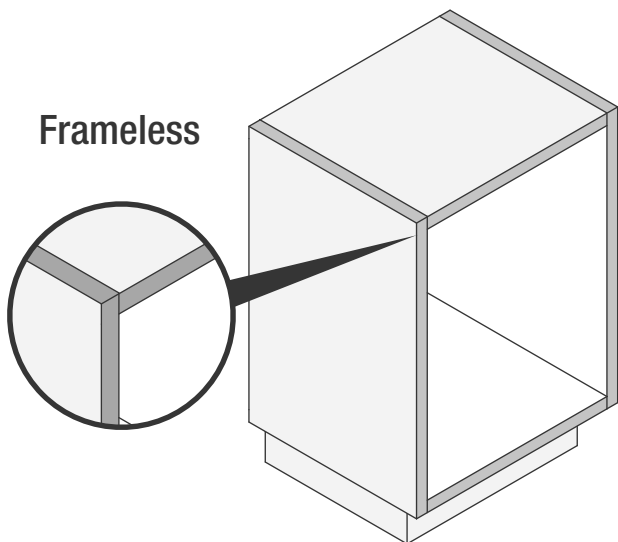


If you have Frameless cabinets, please follow all Frameless instructions in this manual.


TOOLS REQUIRED




Phillips Head
#2 Screwdriver

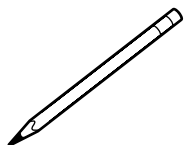

Pencil or Scribe

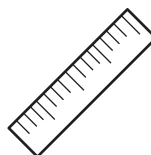


Ruler (in.
and mm)

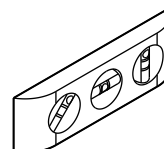

Level

Pre-Installation

PACKAGE CONTENTS

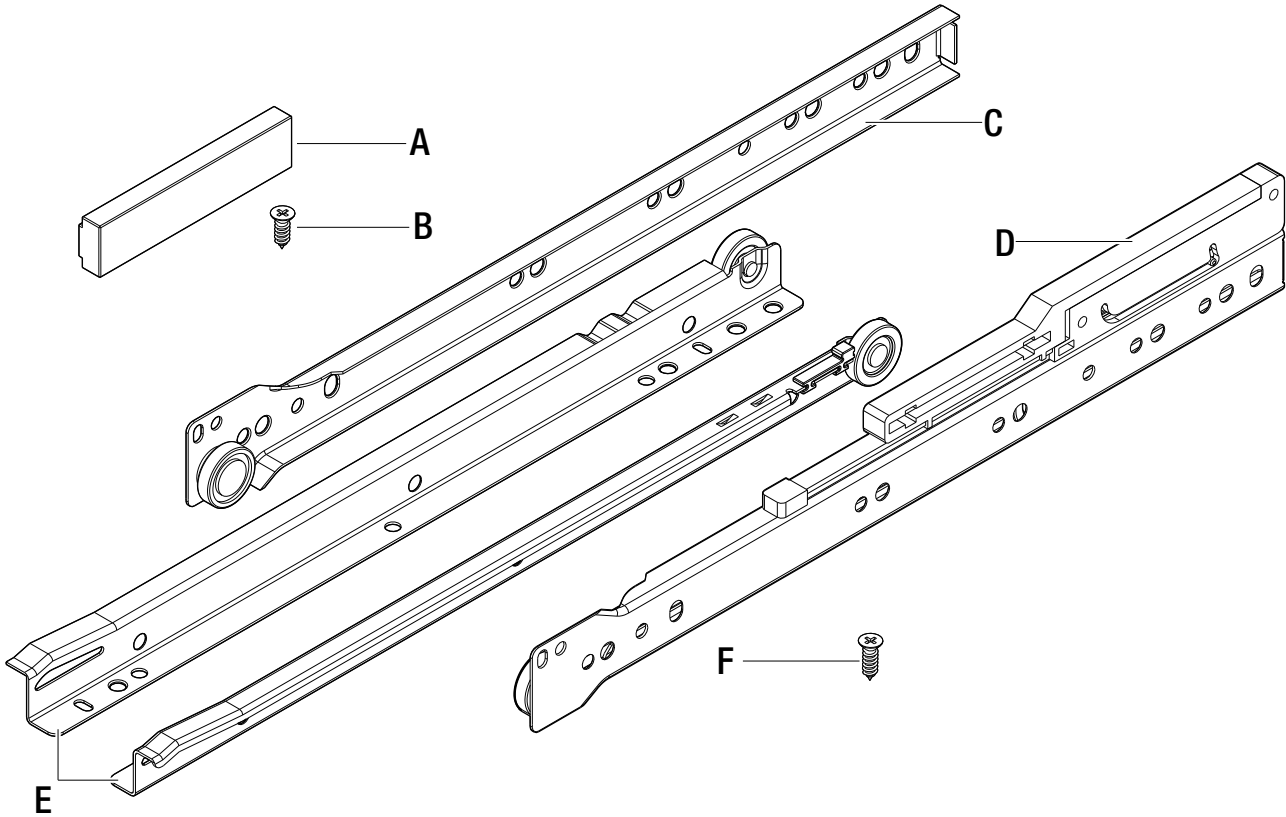


Part	Description	Quantity
A	Face Frame Adapter	2
B	3.5 x 12 Counter Sunk Screw for Adapter	4
C	Cabinet Side Slide Left	1
D	Cabinet Side Slide Right	1
E	Drawer Side Slide Left & Right	2
F	3.5 x 16 Counter Sunk Screw for Slides	12


Pre-Installation (continued)

PLANNING INSTALLATION

When you are finished installing your new Soft Close Roller Runner - the inside of your cabinet will look like:

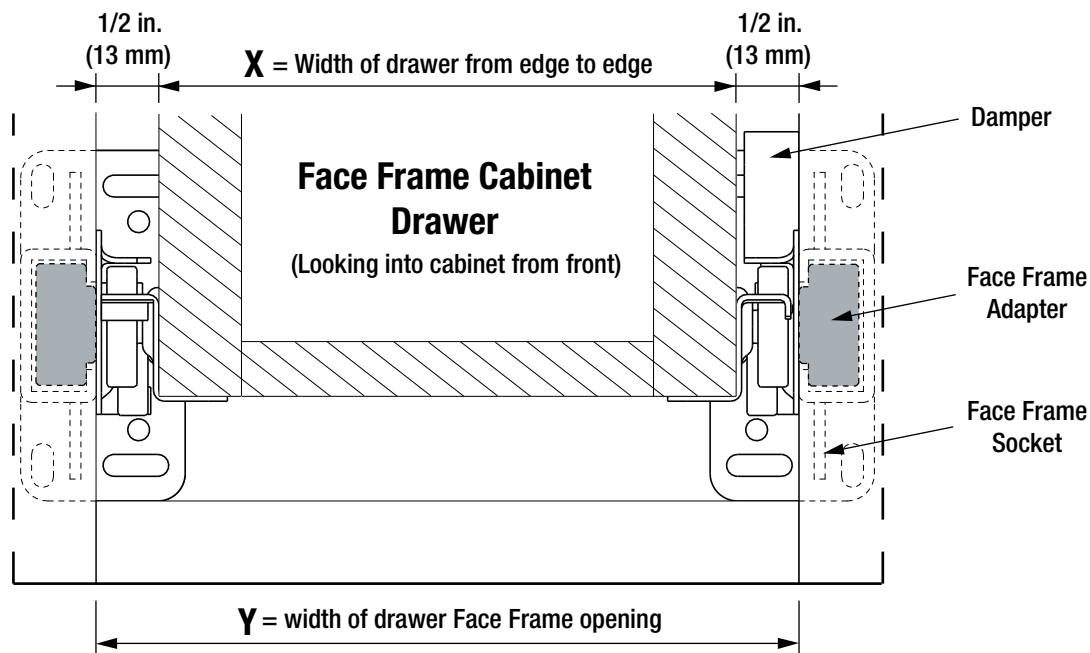


$$X = Y - 1 \text{ in.}$$

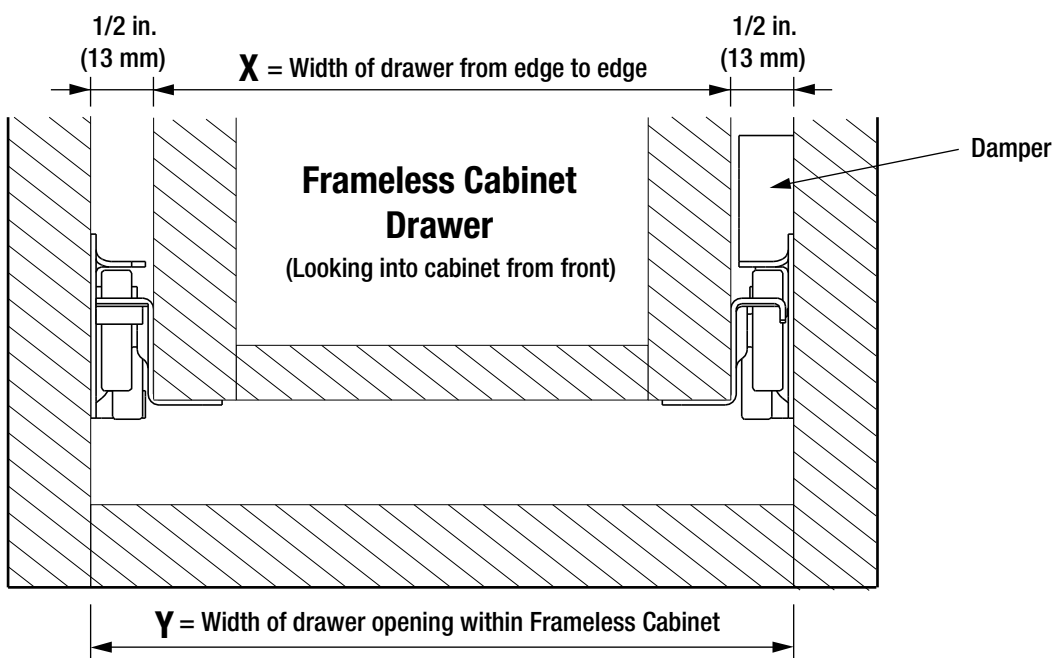


Installation for Face Frame

PLEASE NOTE: Face Frame Cabinets require a Rear Panel Bracket (Included)


- 1 Attach the Face Frame Adapter (A) to the Cabinet Side Slide Right (D) and Left (C) with two screws (B) each. **DO NOT** use electric drill to attach.

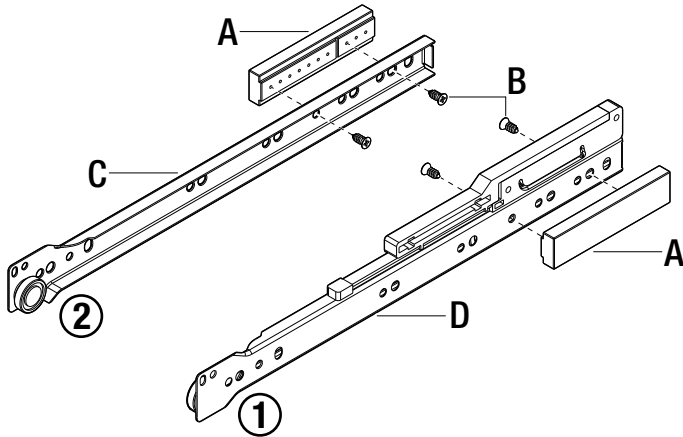



- 2 Place each Cabinet Side Slide into Rear Panel Bracket.

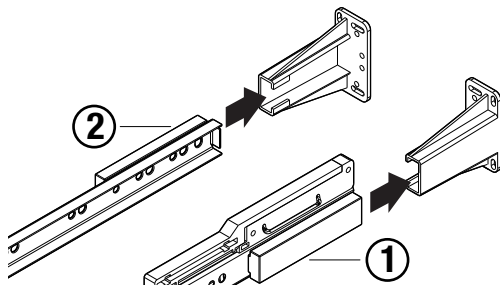


- 3 Ensure each Cabinet Side Slide ② and ① is level and attach with two screws (F) to Face Frame Cabinet.

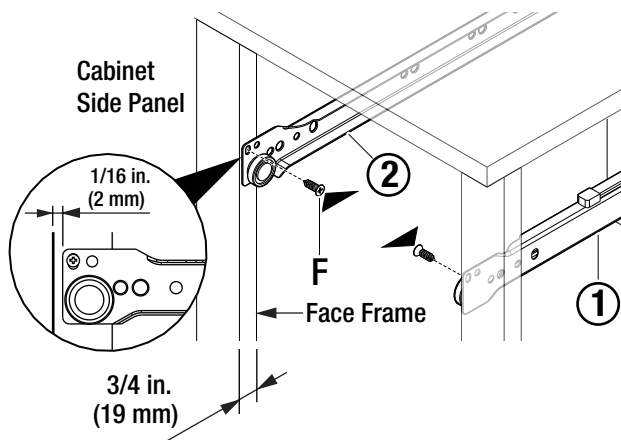


- 4 Ensure each Cabinet Slide ② and ① is level and secure bracket to back of cabinet with 2 screws provided.

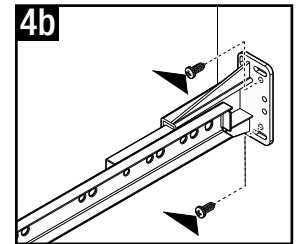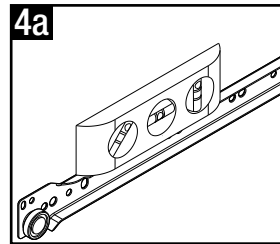

- 5 Install Drawer Slides (E) on bottom side of the drawer using six screws (F) (Three on each side).

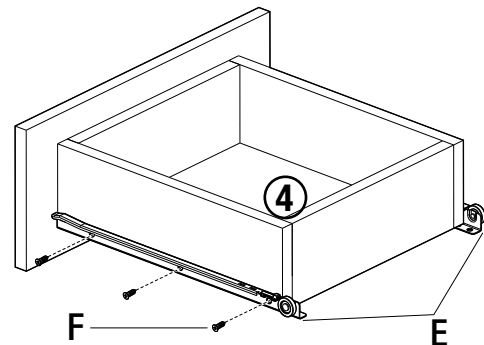


- 6 To install Drawer ④ into Cabinet ③ make sure the Soft Close Damper is pulled forward (as shown in ⑤) then push drawer in until Soft Close Damper catches and pulls the drawer closed.

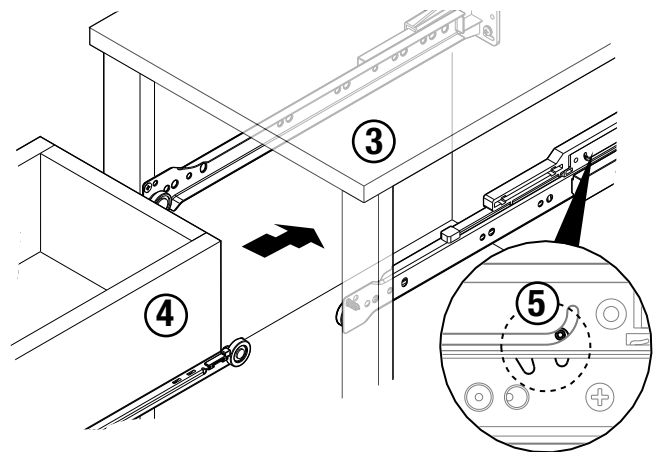


- 7 Once drawer is installed, check drawer alignment to ensure the soft close damper is engaging. If necessary, remove drawer and adjust rear panel brackets as needed. Once final placement is achieved, remove drawer one last time and secure rear panel brackets with remaining screws.

Installation for Frameless


- 1** Begin by installing Drawer Slides (G) on bottom side of the drawer using 6 screws (H).

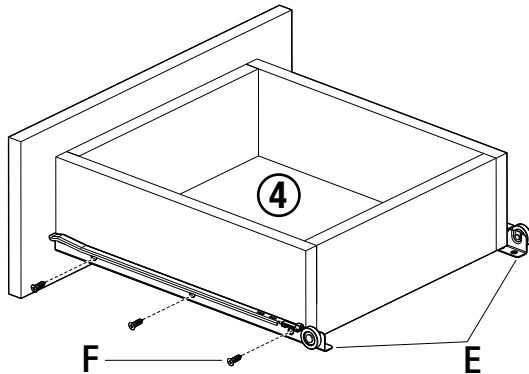

- 2** Next, figure out where the slide should fit into the cabinet.

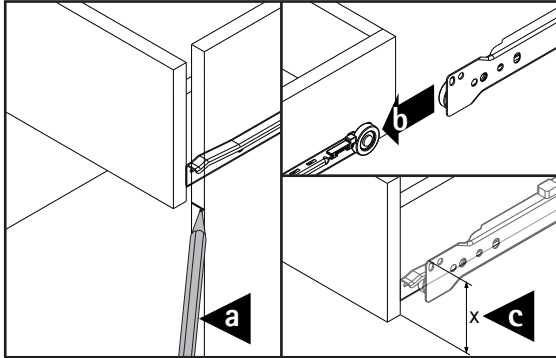


- a. Insert drawer into cabinet and mark the bottom of drawer front.
- b. Take drawer out of cabinet and place Cabinet Slide onto Drawer Slide.
- c. Measure the top of the drawer slide to the bottom of the drawer front = X

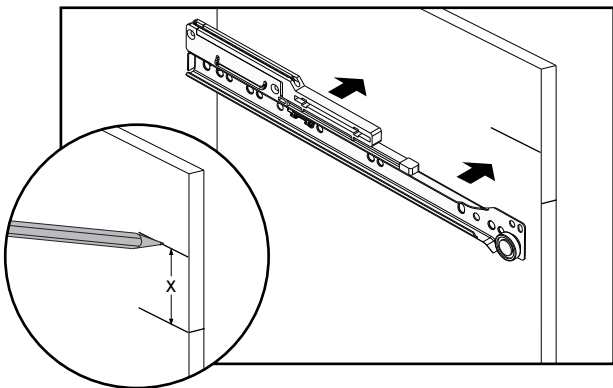


Mark "X" from front bottom mark. Align top of Cabinet Side Slide with mark.


- 3** Next, secure the front of the slide to the cabinet.

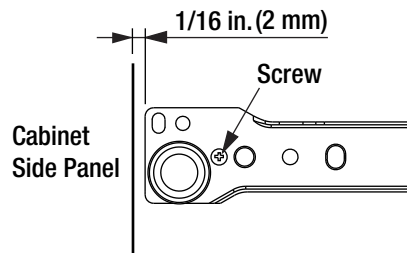


- 4** Line up slides to your marks in the cabinet and ensure Cabinet Side Slide Left (C) and Cabinet Side Slide Right (D) are level. Then attach with 3 screws (F) to each side.

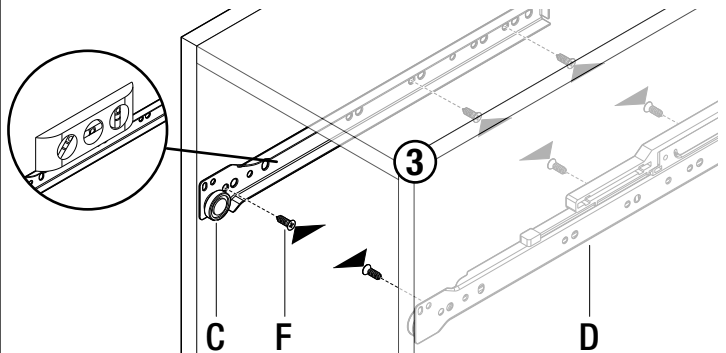

- 5** To install Drawer (4) into Cabinet (3) make sure the Soft Close Damper is pulled forward (as shown in (5)) then push drawer in until Soft Close Damper catches and pulls the drawer closed.

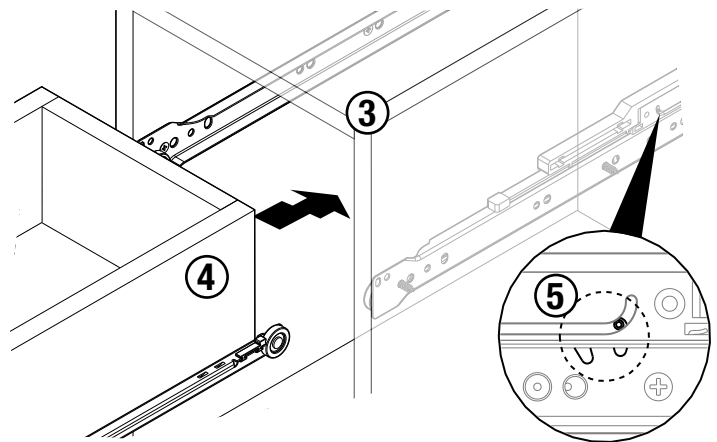

European Self-Closing Bottom-Mount Drawer Slides

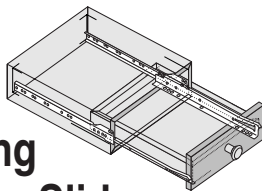

Before You Begin

- Read the Do-It-Yourself Installation Instructions completely before starting.
- Make sure all parts are included.

Parts List per drawer set

- Cabinet Members - (1) Left and (1) Right
- Drawer Members - (1) Left and (1) Right
- 12 X #6 x 5/8" screws

Recommended Tools

- Phillips Screwdriver
- Ruler - inches and metric
- Pencil or Scribe
- Level

Required Parts per drawer set

- Screws
 - #5 wood screws S21F5 (12 minimum)
 - #6 x 5/8" Phillips Flat Head Screws
- Drawer Socket (for face frame cabinets) – Included with Slides

Data

- 75 lb. Capacity per set
- Lengths of 12"(300mm), 14"(350mm), 16"(400mm), 18"(450mm), 20"(500mm), 22"(550mm), 24"(600mm).
- Right side captive member (Holds drawer in place).
- Elongated screw holes for alignment.

Specifications

- Both sides of drawer must have a clearance of 1/2" (12.5 mm).
- Bottom of drawer must have a clearance of 1/4" (6.4 mm).
- Top of drawer must have a minimum clearance of 5/8" (15.9 mm).
- Measure up from bottom of the opening and place a mark at 1-5/8" (41.3 mm) (for face frame installation only).
- Cabinet members are inset 2 mm (5/64") from the edge of the cabinet.
- If installing on face frame cabinets, the frame should be a minimum thickness of 3/4" (19 mm) for wood screws.
- Look at cabinet member for screw positioning. The holes that are slightly smaller are for wood screws. The larger holes are for Euro screws.

1. Installing Cabinet Members to Cabinet

Cabinet members and drawer sockets are marked with an L (left) and R (right).

Frameless Mounting

Determine position of the bottom of the drawer front in relation to the front of the cabinet and draw a ref. line on both L & R inside face of cabinet. (Fig. 1 Frameless). Next, go to step #2 and install slides to drawer members. After drawer members are mounted, fit loose cabinet members into drawer members. Measure from bottom of drawer front to center of mounting hole on cabinet member. Transfer that measurement and draw a second line onto the L & R side of cabinet using the ref. line made in step #1. Align center of mounting hole of cabinet member with the second line made and fasten with one screw. Next, use a level to properly align and fasten remaining screw.

Face Frame Mounting

Place drawer socket on back of cabinet member as shown. Align cabinet member top to the edge of the 1-5/8" (41.3mm) line and fasten with one screw in the elongated screw hole. Next fasten the drawer socket with one screw and use a level to align cabinet members properly. Fasten the remaining screws into drawer sockets.



2. Installing Drawer Members to Drawer

Place drawer members onto bottom of drawer with rollers located in the rear. You can mount drawer members to drawer either from the side or bottom. Fasten with screws.


3. Final Steps

Insert drawer into cabinet by placing drawer member rollers over cabinet member rollers. To remove drawer, pull to where it stops, then lift and pull out.

SPECIFICATIONS

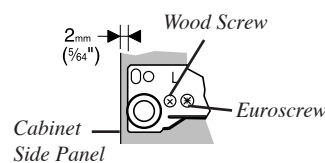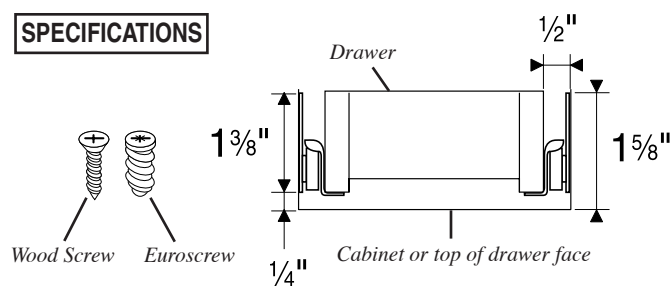


FRAMELESS

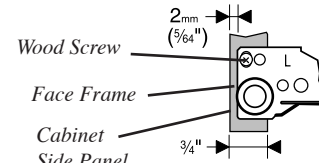


FACEFRAME


1 Frameless Mounting

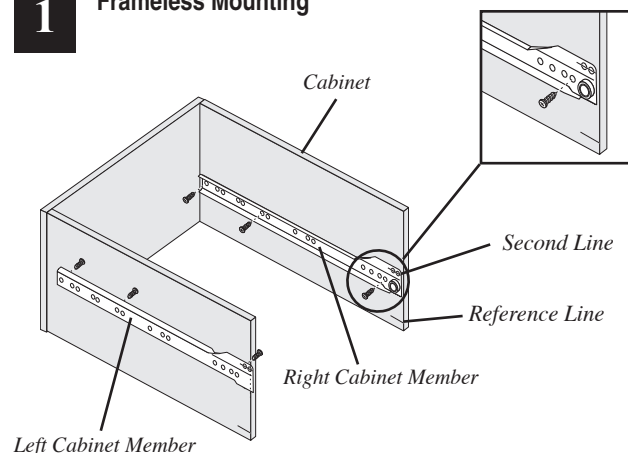


1 Face Frame Mounting

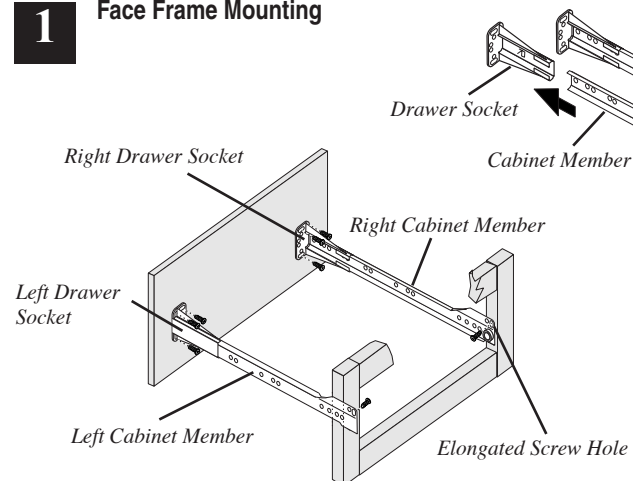

2

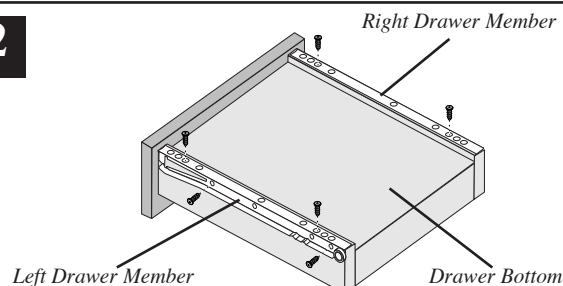

Cabinet Member Dimensions

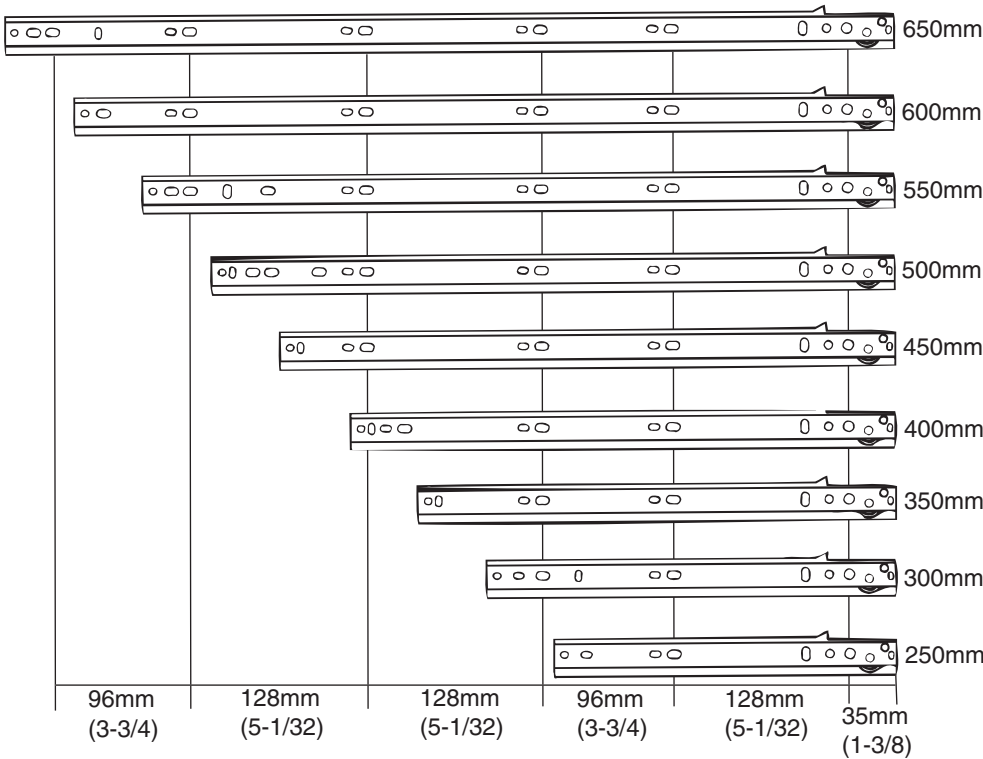

Drawer Member Dimensions

